



**☐ Calibration Confirmation**

**Note:** Your Hovertrax 2.0 should have been calibrated at the factory.

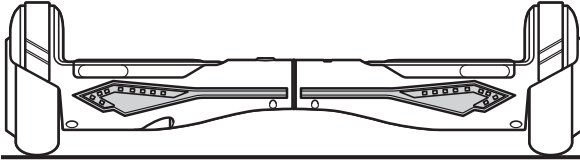


- 1** Place Hovertrax 2.0 on a level surface.

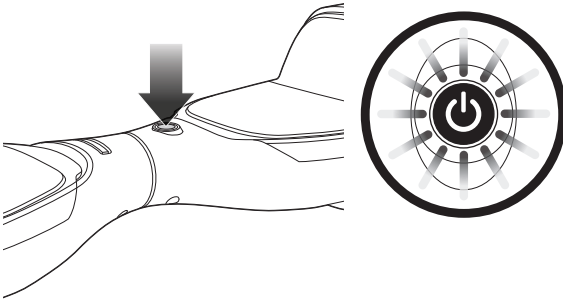


- 2** Turn power **ON**. If product remains level or adjusts to become level, calibration has been confirmed. No further steps are needed.


If product begins to roll or does not move into a level orientation, see Calibrating Hovertrax 2.0 on page 2.

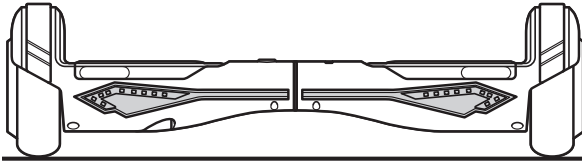**▣ Calibrating Hovertrax 2.0**


**1** Place Hovertrax 2.0 on a level surface.

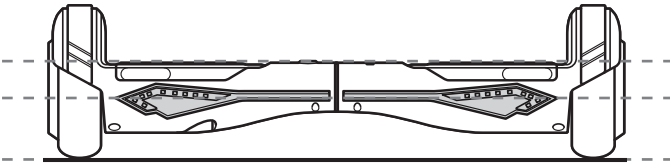


**2** Manually adjust the platforms so they are level to the ground.

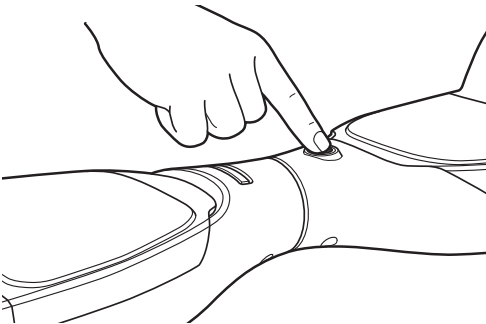

**3** While keeping the product level, turn power **ON** and **HOLD** until product beeps and lights flash (approximately 15-20 seconds).

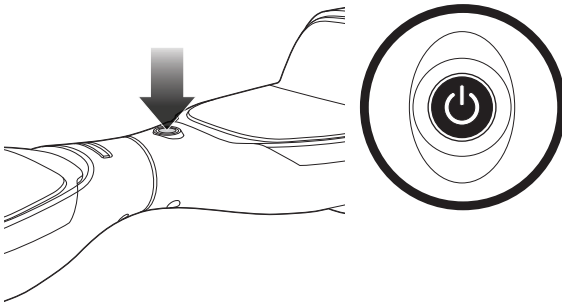

**4** Turn power back **OFF**.

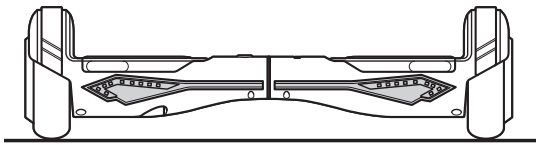

**5** Calibration complete.

**Note:** Once the product has been calibrated, no matter what position (angle) the platforms are in when it is turned off, the platforms will automatically self-balance themselves back to the calibrated position when product is turned on.